

## Projector Preventive Maintenance and Filter Cleaning Check List


A periodic preventive maintenance scheduled is determined by your environment. It is recommended you check the projectors air intake filters and vents periodically to determine how frequently the projector(s) should be cleaned. The projector does not have to be dismounted from the ceiling.

- 1.) Make sure the projector is powered off and cooled down for 30 minutes.
- 2.) When cleaning the outside of the projector, use a dry clean cloth. (Cleaning solutions, solvents, oils or canned air products should not be used or applied to a cleaning cloth.)
- 3.) When cleaning the air intake filter, remove the filter from the projector and vacuum (small portable handheld vacuum) the filter material then re-insert the air filter into the projector. (Do not use canned air products as the propellant may contain a chemical that will degrade the filter material. Do not rinse the air filter in water.)

Please see the screen shots below and on the next 2 pages.

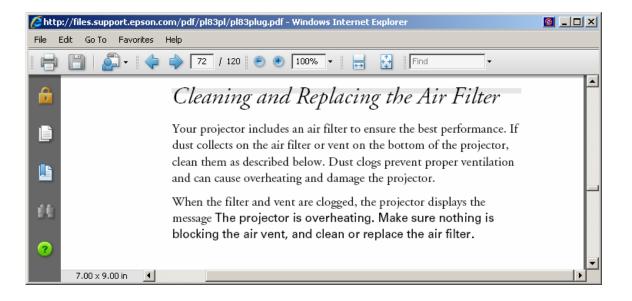


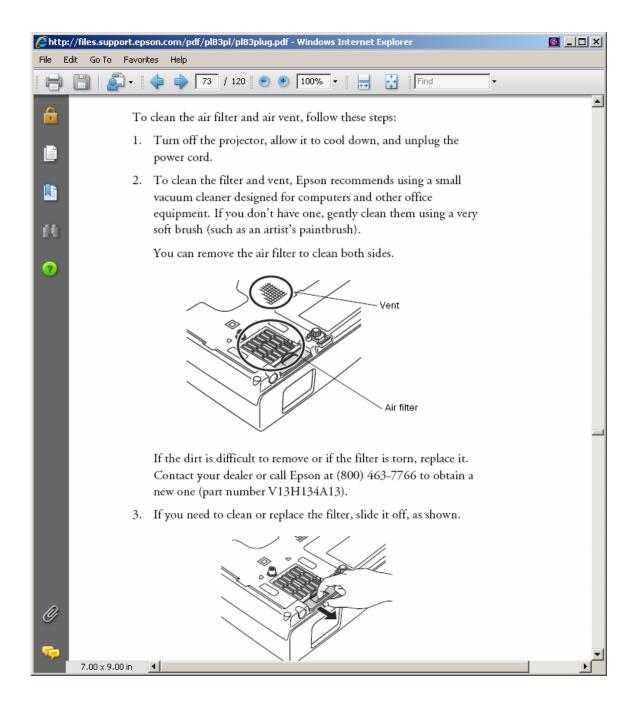

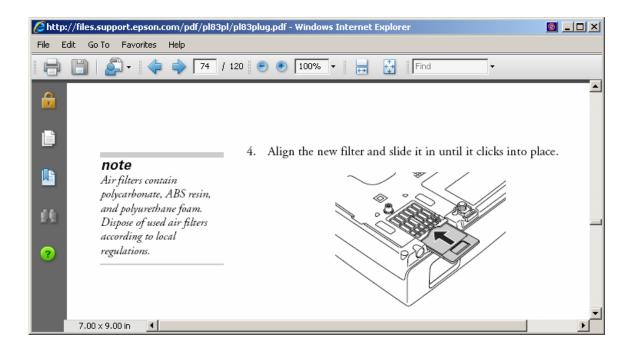

4) Cleaning the air vent :

Using a small portable handheld vacuum cleaner, vacuum the outside air vent located on the bottom of the unit. If the air vent is covered by a projector mount, use a small crevice tool with the vacuum cleaner to reach the air vent. (**Do not use canned air to try and clean the vent as this will blow dust inside the projector.**)

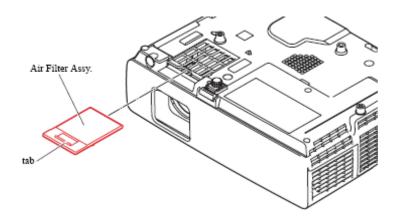

5) When cleaning the lens, use a soft dry cloth that is free of any chemicals, solvent, oils or cleaning solutions.